

Installation and operating instructions for Brake HW 145 FHM

E 09.776e



RINGSPANN GmbH

Schaberweg 30-38
61348 Bad Homburg
Germany

Phone +49 6172 275 0
Fax +49 6172 275 275

www.ringspann.com
info@ringspann.com

| | | | | | |
|-------------------|---|------------------|---------------|-----------|---------|
| RINGSPANN | Installation and operating instructions for Brake HW 145 FHM spring activated – hydraulically released | E 09.776e | | | |
| Issue: 14.05.2021 | Version: 2 | Drawn: BAHS | Checked: EISF | Pages: 22 | Page: 2 |

Important

Please read these instructions carefully before installing and operating the product. Your particular attention is drawn to the notes on safety.

These installation and operating instructions are valid on condition that the product meets the selection criteria for its proper use. Selection and design of the product is not the subject of these installation and operating instructions.

Disregarding or misinterpreting these installation and operating instructions invalidates any product liability or guarantee by RINGSPANN; the same applies if the product is taken apart or changed.

These installation and operating instructions should be kept in a safe place and should accompany the product if it is passed on to others -either on its own or as part of a machine- to make it accessible to the user.

Safety Notice

- Installation and operation of this product should only be carried out by skilled personnel.
- Repairs may only be carried out by the manufacturer or accredited RINGSPANN agents.
- If a malfunction is indicated, the product or the machine into which it is installed, should be stopped immediately and either RINGSPANN or an accredited RINGSPANN agent should be informed.
- Switch off the power supply before commencing work on electrical components.
- Rotating machine elements must be protected by the purchaser to prevent accidental contact.
- Supplies abroad are subject to the safety laws prevailing in those countries.

This is a translation of the German original version!

In case of inconsistencies between the German and English version of this installation and operating instruction, the German version shall prevail.

| | | | | | |
|-------------------|---|-------------|---------------|------------------|---------|
| RINGSPANN | Installation and operating instructions for Brake HW 145 FHM spring activated – hydraulically released | | | E 09.776e | |
| Issue: 14.05.2021 | Version: 2 | Drawn: BAHS | Checked: EISF | Pages: 22 | Page: 3 |

Contents

- 1 DESCRIPTION OF THE CALIPER**
 - 1.1 Principle
 - 1.2 Delivery condition
- 2 INSTALLATION**
 - 2.1 Preparing the positioning area
 - 2.2 Installing the disc
 - 2.3 Installing the caliper
 - 2.4 Initial start-up
- 3 OPERATIONAL RUNNING**
 - 3.1 Caliper tightening
 - 3.2 Caliper untightening
 - 3.3 Caliper manual release
- 4 PERIODIC MAINTENANCE**
- 5 MAINTENANCE**
 - 5.1 Initial clearance adjustment
 - 5.2 Adjustment of brake pad clearance, pad wear take up
 - 5.3 Replacement of worn brake pads
 - 5.4 Opening and wear contacts (mechanicals) adjustment
- 6 SPARE PARTS**
- 7 TROUBLESHOOTING**

| | | | | | |
|-------------------|---|-------------|---------------|------------------|---------|
| RINGSPANN | Installation and operating instructions for Brake HW 145 FHM spring activated – hydraulically released | | | E 09.776e | |
| Issue: 14.05.2021 | Version: 2 | Drawn: BAHS | Checked: EISF | Pages: 22 | Page: 4 |

1 Description of the caliper

1.1 Principle

The HW 145 FHM calipers are hydraulic fail-safe calipers; the braking force is applied by spring washers and hydraulic pressure is necessary to hold the brake released. The stack of spring washers is adjusted in factory. This adjustment, combined with adjustment of the pads gap, determines the braking torque value.

There is a type plate on the brake with a 16-digit article number. The exact design of the brake is defined by this article number only.

As well as these instructions, please also consider the catalogue data for the brake at www.ringspann.com and the drawings in the individual sections.

The Caliper is describe as “manually readjusted”. This means that the pad wear must be compensated for by manual adjustment of the pad gap to avoid any loss of braking force.

The brakes have a manual release device mechanically holding the caliper open, without any need for a hydraulic pressure. This release is useful for installation and maintenance work when there is no hydraulic pressure available.

1.2 Delivery condition

The caliper is delivered in the following conditions:

- With two breaking pin per brake half Ø32g6,
- In manual release position, i.e. manually locked in open position,
- With pads installed,
- Adjusted with the nominal lining gap,
- The holding force adjusted according to customer’s specifications,
- Mechanical contacts adjusted,
- With bleed screw in correct position.
- As well as these instructions, please also consider the catalogue data for the brake at www.RINGSPANN.de and the drawings in the individual sections.



Important!

Be careful: Check the support thickness is E+ 30mm

| | | | | | |
|-------------------|---|-------------|---------------|------------------|---------|
| RINGSPANN | Installation and operating instructions for Brake HW 145 FHM spring activated – hydraulically released | | | E 09.776e | |
| Issue: 14.05.2021 | Version: 2 | Drawn: BAHS | Checked: EISF | Pages: 22 | Page: 5 |



Life-threatening danger!

Disc must be absolutely degreased before all contact with the brakes linings.

In case of lining pollution with grease, the nominal brake force is not guaranteed.

Calipers are fail safe components.

All setting and repairs must be performed by skilled operators.

BE CAREFUL: The caliper is delivered in " manual release" position and the holding force is adjusted in the factory.

Instructions in this manual must be followed up to chapter 2.4 inclusive (INITIAL START-UP) to ensure that the brake is operational.

When assembling, operating and maintaining the brake it is to be ensured that the entire drive train is secured against being switched on unintentionally. Moving parts can cause severe injury. Rotating parts (e.g. brake disc) must be secured by the operator against unintentional touching.

Strongly pre-loaded pressure springs are installed in the springed thrusters of the brake. The spring thruster may only be disassembled by the factory.

2 Installation

2.1 Preparing the positioning area

Ensure that the positioning surface is clean and dry.

Make sure that there is sufficient space around the brake.

Check that the attaching holes are in conformity (center distances, sizes and numbers).

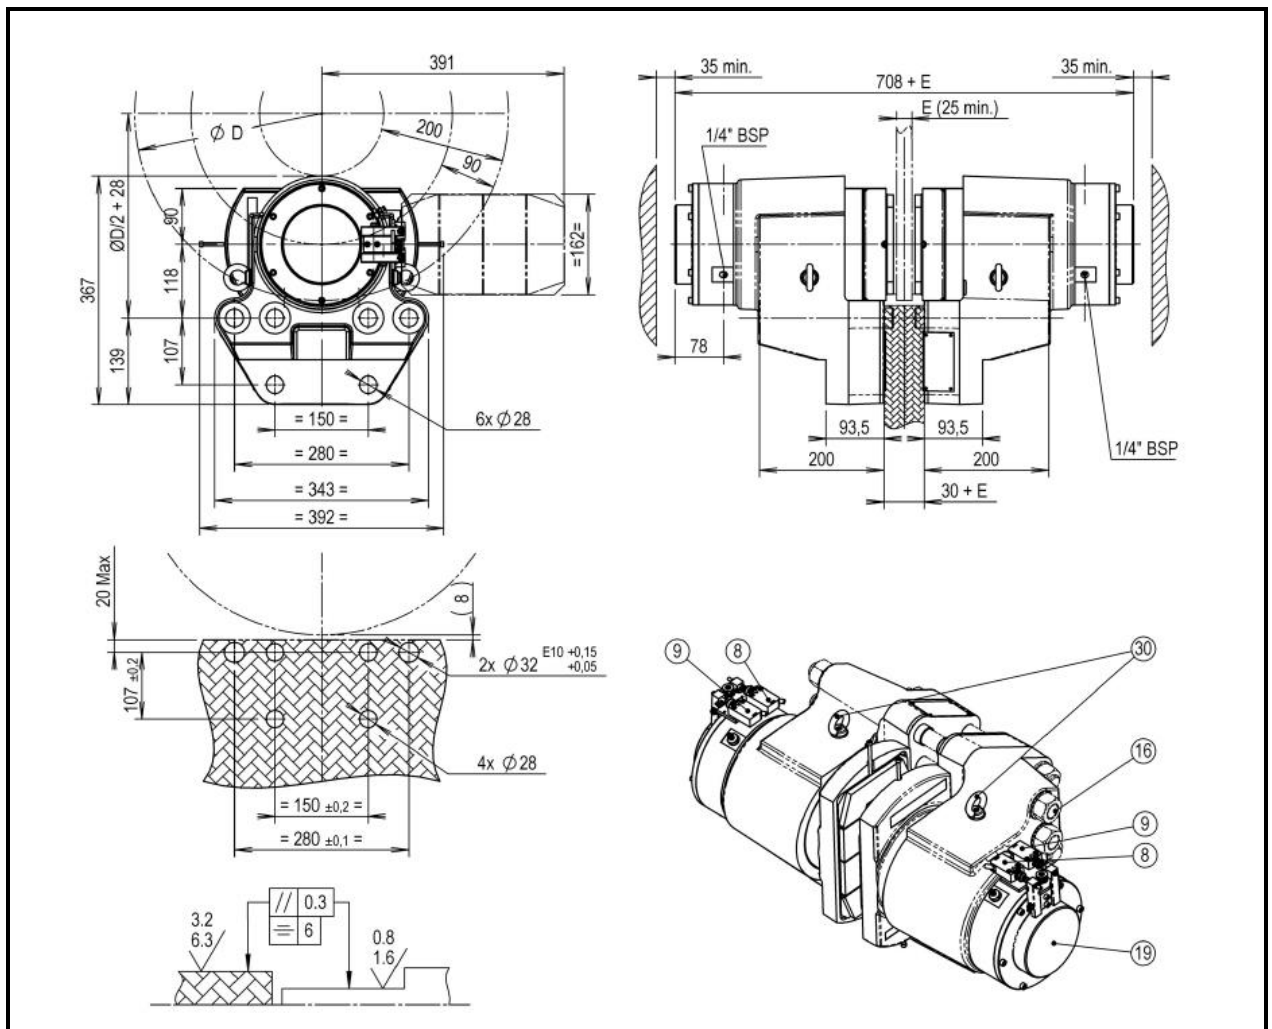


Fig. 2.1

- 8 Brake off monitoring switch
- 9 Pad gap monitoring switch
- 16 Optional mounting set
- 19 Manual release and adjustment screw
- 30 Lifting eyes

2.2 Installing the disc

Make sure that the disc is accurately positioned and attach it to its hub.
Check that the disc is not buckled more than 0.3mm.
Check that the disc is 25mm (min) thick



Important!

If these conditions are not complied with, the caliper cannot be assembled or will not operate to standard. Contact RINGSPANN for more details.

| | | | | | |
|-------------------|---|-------------|---------------|------------------|---------|
| RINGSPANN | Installation and operating instructions for Brake HW 145 FHM spring activated – hydraulically released | | | E 09.776e | |
| Issue: 14.05.2021 | Version: 2 | Drawn: BAHS | Checked: EISF | Pages: 22 | Page: 7 |

First clean the disc tracks with the degreasing agent:

- Quick drying degreaser (CRC / KF)



Important!

BE CAREFUL: The disc must be degreased and free of any deposits so as not to decrease the friction coefficient.

2.3 Installing the caliper

2.3.1 List of tools

1. 1200Nm torque wrench, socket measuring 41mm across flats (caliper attachment).
2. 8mm AF spanner + Flexible pipe inside Ø6mm (Bleed).

2.3.2 Brake handling

Put the assembly in position on the disc, raising it with two lifting rings Fig. 2.1
Weight for 1 half caliper: 119kg

2.3.3 Alignment procedure

1. Check the disc parallelism on its support: 0.3mm max.
2. Check the centering of the support with the disc: +/-2mm.
3. Place the first half-caliper by holding it with the lifting ring **01** on its support **02** and insert the 2 breaking pin **03** provided. Keep it in position with the 6 axis of fixation **04** M27 class 10.9 (unprovided: They are part of the Axis Box + Washers + Nuts available in option).
4. Place the second half-caliper by holding it with the lifting ring **01**.
5. Place the 12 flat washers **V5** type Z M27 then place and screw with attention, the 12 nuts **V6** M27 class 10.

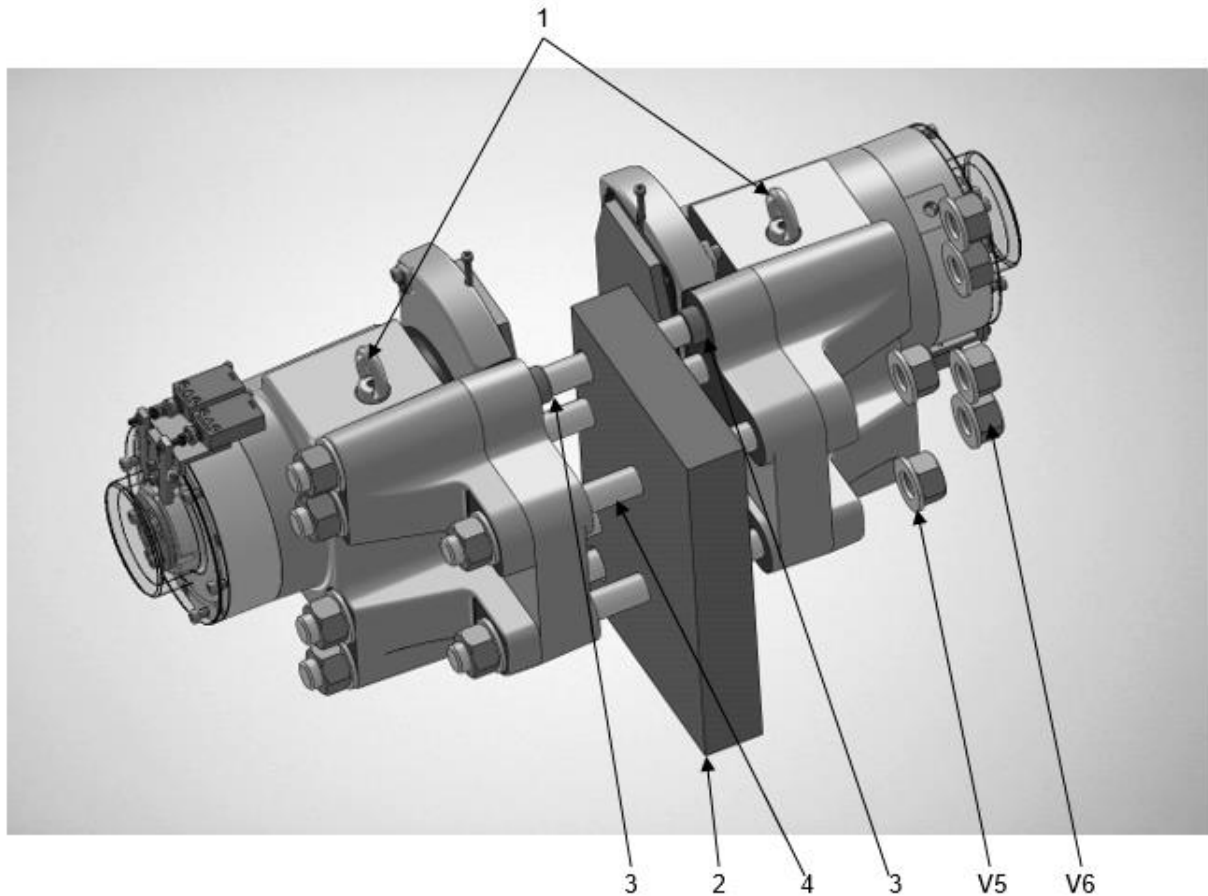


Fig. 2.2

6. Tighten to the torque the 12 nuts **V6**

The tightening torque (Cs) which has to be applied on the two screw rows for each nut is:
Cs = 1120Nm ±5% with greased screws.



Important!

Check the tightening torque of the opposite nuts

7. Check, after having tightened to torque, that the whole part has not moved.

| | | | | | |
|-------------------|---|-------------|---------------|------------------|---------|
| RINGSPANN | Installation and operating instructions for Brake HW 145 FHM spring activated – hydraulically released | | | E 09.776e | |
| Issue: 14.05.2021 | Version: 2 | Drawn: BAHS | Checked: EISF | Pages: 22 | Page: 9 |

2.3.4 Orientation of the piston heads

If the caliper stands on a horizontal support, the orientation of the piston heads is not important.

For other positions, the piston heads must be oriented: Bleed screw 11271-17 on top Fig. 2.3 and connecting plug on bottom, in a vertical plan $\pm 30^\circ$. For more information, please contact RINGSPANN.

2.3.5 Hydraulic connection



Important!

**Opening pressure: 230bar
MAX PRESSURE: 250bar**

For an ambient temperature range from 0 through 60°C, recommended oil is ISO HM32. By instance, RINGSPANN uses FUCHS RENOLIN EXTRA 32S.

Outside of the above temperature range, the viscosity shall be between 12 and 100mm²/s with a possibility to extend this range from 10 thru. 400mm²/s in case of exceptional use.



Important!

**This oil must be clean
(maximum permitted level of pollution as per NAS 1638: 10µm).
Use only new fluid and never mix several types all brands of fluid.**

The caliper must be connected to its source at a hydraulic pressure by threaded plug G 1/4" BSP. Fig. 2.3.
Do not use hemp, mastic, Teflon (etc.) and use flexible hoses exclusively.
It is preferable to use liquid joints.
Clean the pipes and couplings while ensuring that they are perfectly clean (soiling, scale, swarf, etc.).

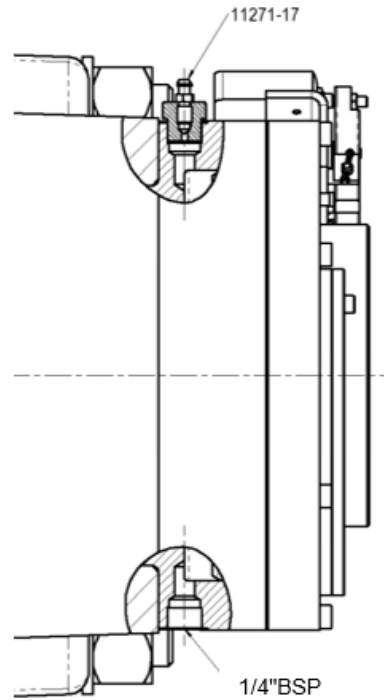


Fig. 2.3

2.3.6 Electrical connection

Opening and wear contact:

Bipolar switch

Mechanical contact output by
cable 5 wire x 0.75mm²
Standard length of the cable: 2m.

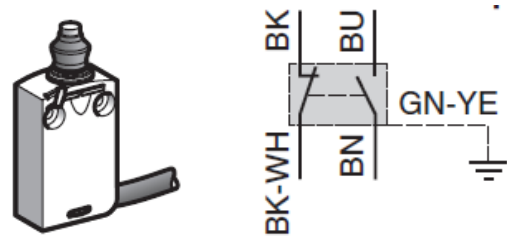


Fig. 2.4

| | | | | |
|-------------------|---|------------------|---------------|-----------------------|
| RINGSPANN | Installation and operating instructions for Brake HW 145 FHM spring activated – hydraulically released | E 09.776e | | |
| Issue: 14.05.2021 | Version: 2 | Drawn: BAHS | Checked: EISF | Pages: 22 Page: 11 |

2.4 Initial start-up

2.4.1 Hydraulic circuit bleed

Tools: A/F wrench, Hose int. $\varnothing = 6\text{mm}$.



Important!

Take the necessary precautions to avoid the oil being sprayed onto the disc.

1. Connect the bleed screw 11271-17 to a 6mm ID flexible hose and put the end of the hose into a container Fig. 2.5.
2. Feed oil to the caliper from the power pack, then from the hand pump.
3. Loosen slightly the bleed screw 11271-17.
4. When the oil pours out continuously and there are no more air bubbles at the end of the hose, tighten the bleed screw 11271-17.
5. Disconnect the flexible hose (beware of any oil remaining in the hose)



Important!

**This file must be clean
(maximum permitted level of pollution as per NAS 1638: 10 μm).
Use only new fluid and never mix several types all brands of fluid.**

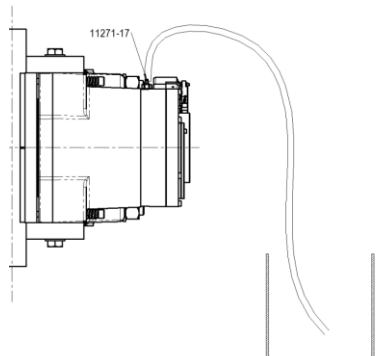


Fig. 2.5

| | | | | | |
|-------------------|---|-------------|---------------|------------------|----------|
| RINGSPANN | Installation and operating instructions for Brake HW 145 FHM spring activated – hydraulically released | | | E 09.776e | |
| Issue: 14.05.2021 | Version: 2 | Drawn: BAHS | Checked: EISF | Pages: 22 | Page: 12 |

2.4.2 Adjustments of pad gap



Important!

**The calipers are delivered fully back thanks to manual loosening.
(excluding hydraulic cylinder run)**

First check the thickness of the disc and the support plate. Check that the total gap between the pads and the disc corresponds to the "PG" Pad Gap on the type plate.

The pad gap must be equal both side $PG = (a+b)$.

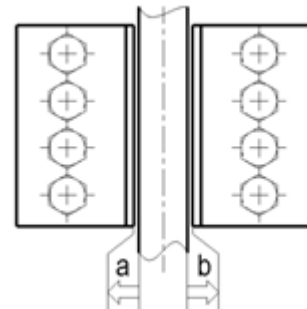


Fig.2.6

2.4.3 Control of the general running



Important!

Be Careful: The disc must be degreased and free from any deposits so as not to decrease the friction coefficient.

Check the well running of the electric contacts.

Run the brake under no-load with the disc turning, 20 or so times, to bed in the pads.



Information!

THE SYSTEM IS NOW OPERATIONNAL

3 Operational RUNNING

3.1 Caliper tightening

The lack of hydraulic pressure allows the pads to be tightened on the disc.
The opening contact is not activated.

| | | | | | |
|-------------------|---|-------------|---------------|------------------|----------|
| RINGSPANN | Installation and operating instructions for Brake HW 145 FHM spring activated – hydraulically released | | | E 09.776e | |
| Issue: 14.05.2021 | Version: 2 | Drawn: BAHS | Checked: EISF | Pages: 22 | Page: 13 |

3.2 Caliper untightening

Apply opening pressure to open the brake.
The opening contact is activated.

3.3 Caliper manual release

Manual release keeps the caliper open without hydraulic pressure.
Refer to chapter 5.1 and chapter 5.2.



Important!

The manual release must be deactivated to ensure a well running of the brake.

4 PERIODIC MAINTENANCE

Every two months, check:

- As a general rule, inspect the entire system for correct operation
- Check that there is not any leakage
- Also, check the brake pad gap see chapter 5.3.



Attention!

When the remaining lining thickness reaches 3mm, proceed to pad exchange as per chapter 5.3. If this rule is not observed, a loss of breaking force may occur.

Every two years, replace:

- Oil in the *power pack* (refer to the power pack instructions)

Every five years:

- Plan complete overhaul of the entire unit (replace worn parts, seals, spring washers, flexible hoses...)

| | | | | | |
|-------------------|---|-------------|---------------|------------------|----------|
| RINGSPANN | Installation and operating instructions for Brake HW 145 FHM spring activated – hydraulically released | | | E 09.776e | |
| Issue: 14.05.2021 | Version: 2 | Drawn: BAHS | Checked: EISF | Pages: 22 | Page: 14 |

5 Maintenance

5.1 Initial clearance adjustment

Tools: A/F wrench, Electrician's flat screwdriver.

1. Supply the caliper with opening pressure and maintain this opening pressure throughout the operation.
2. Remove the 2 connectors from the opening and adjustment switches Fig.5.1 using a flat screwdriver. To unlock the connector, insert the screwdriver behind the connector and turn it 1/4 turn anti-clockwise then insert the screwdriver into the slot on the side to release the connector.

In 'ATEX' execution, it is not possible to remove the connector

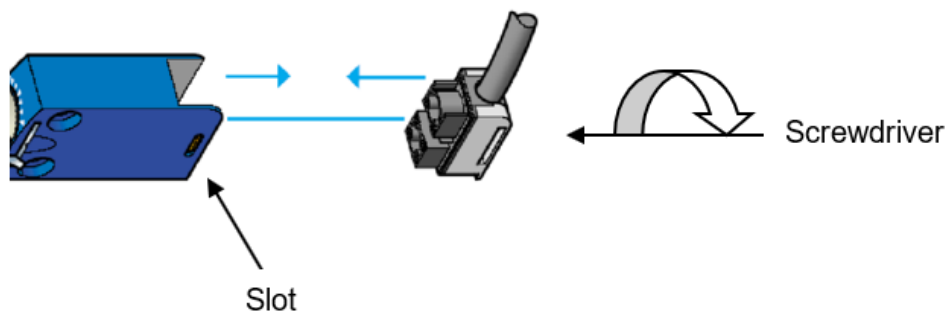


Fig. 5.1

Note: Do not remove the detector assembly as this will cause the factory setting to be lost.

3. Remove lid **09** using its 6 screws **V09** with a A/F wrench Fig. 5.2.
4. Remove the locking washer **07** Fig. 5.3 by removing the 3 screws.
5. Turn the shaft **10** with a 15 A/F wrench clockwise to move the jaw up to the clearance free gap indicated on the datasheet or plate Fig. 5.4.
6. Reinstall the washer **07** and the lid **09** and tighten the 6 screws **V09** (torque 16Nm).
7. Push the connectors back into the switches and lock them by turning a flat screwdriver clockwise 1/4 turn.
8. Repeat the same disassembly, adjustment and reassembly procedure on the other side (except the detection system, which does not exist).
9. Disconnect the pressure.



Attention!

MOVEMENT IS STILL POSSIBLE AFTER CUTTING OFF THE PRESSURE.

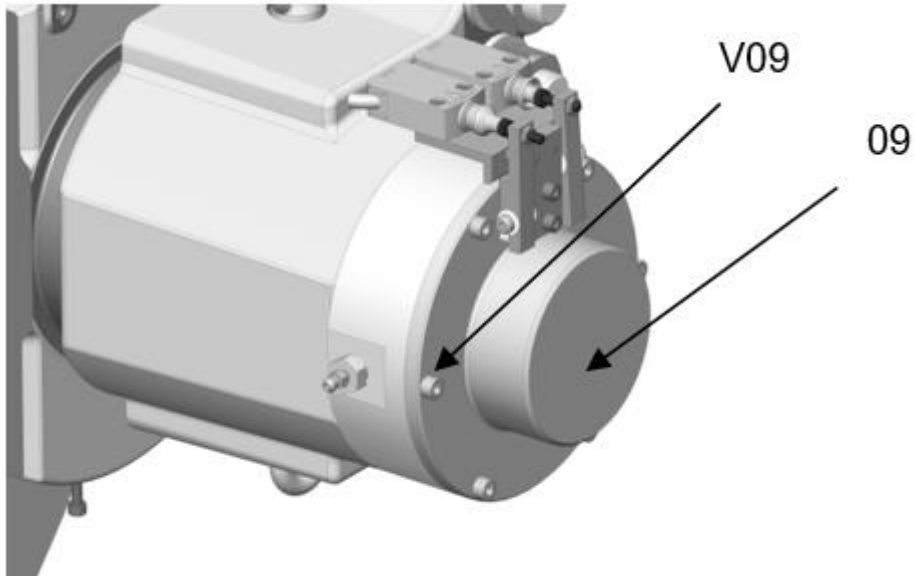


Fig. 5.2

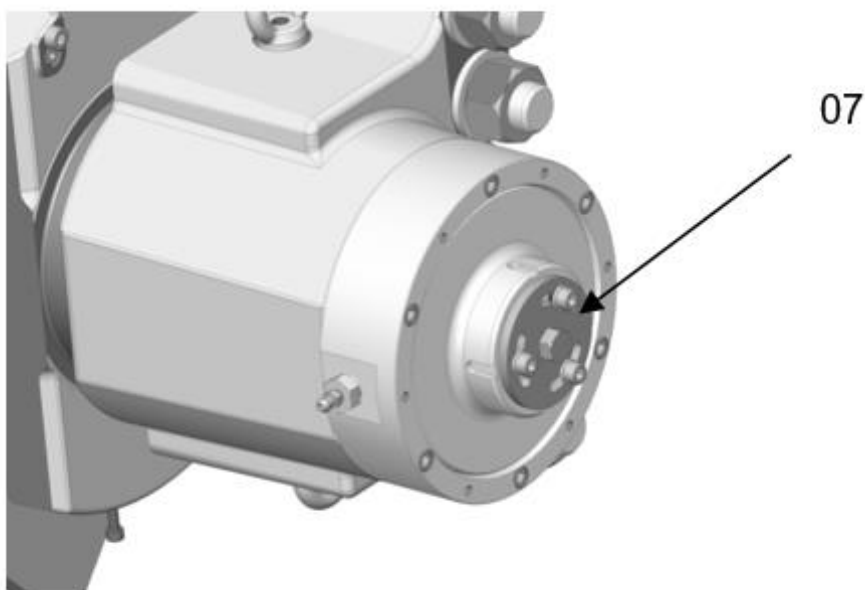


Fig. 5.3

| | | | | | |
|-------------------|---|-------------|---------------|------------------|----------|
| RINGSPANN | Installation and operating instructions for Brake HW 145 FHM spring activated – hydraulically released | | | E 09.776e | |
| Issue: 14.05.2021 | Version: 2 | Drawn: BAHS | Checked: EISF | Pages: 22 | Page: 16 |

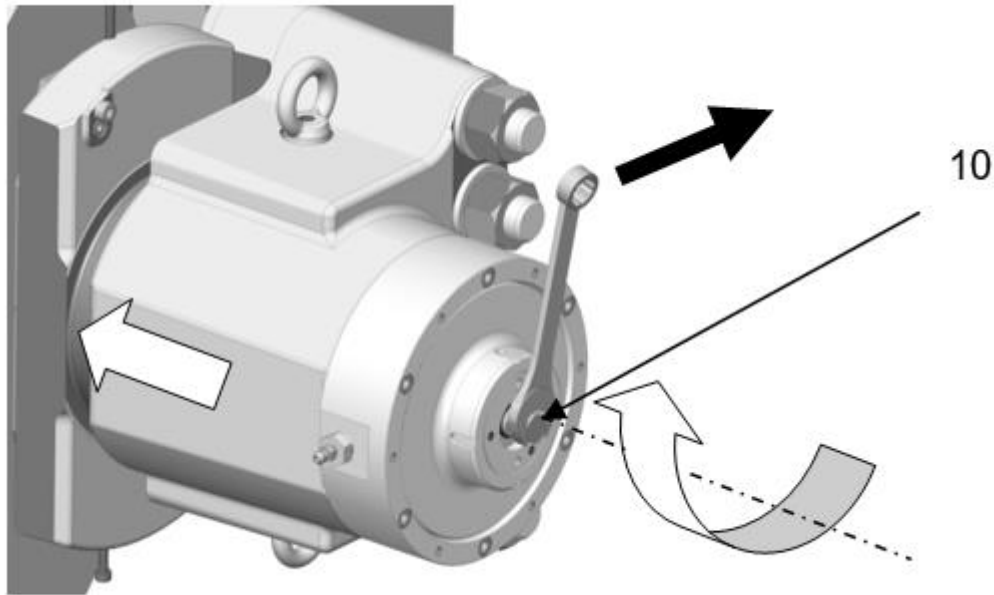


Fig. 5.4

5.2 Adjustment of brake pad clearance, pad wear take up

Tools: A/F wrench, Electrician's flat screwdriver.

Procedure: This operation must be executed on both sides – 2 half caliper



Danger!

**Frequently check the total gap between pads and the disc.
(a 1mm increase to this gap corresponds to 4% loss of torque).
Refer to the RINGSPANN Datasheet for the nominal clearance.**



Attention!

**When the remaining lining thickness reaches 3mm, proceed to pad
exchange as per chapter 5.3. If this rule is not observed, a loss of
breaking force may occur.**

1. Carry out the same procedure as for the initial adjustment in section chapter 5.1 from point 1 to point 9

| | | | | | |
|-------------------|---|-------------|---------------|------------------|----------|
| RINGSPANN | Installation and operating instructions for Brake HW 145 FHM spring activated – hydraulically released | | | E 09.776e | |
| Issue: 14.05.2021 | Version: 2 | Drawn: BAHS | Checked: EISF | Pages: 22 | Page: 17 |

5.3 Replacement of worn brake pads

Tools: A/F wrench, Electrician's flat screwdriver.

Procedure: For each pad

1. Supply the caliper with opening pressure and maintain this opening pressure throughout the operation.
2. Carry out the same removal procedure as in chapter 5.1 from point 1 to point 4 inclusive.
3. Turn the wrench anti-clockwise to push back the jaw to the maximum Fig. 5.5. The clearance between the pad holder and the disc must not be more than: 9 mm + remaining pad thickness.
4. Insert the Chc M5x70 Fig. 5.5 screws onto the sides of the pad, used as handles, and take pad **11** out of the housing in body **01**.
5. Replace with a new one.
6. Remove the Chc M5x70 screws from the pad.
7. Repeat the same initial setting and reassembly procedure as in chapter 5.1 from point 5 to point 7.
8. Repeat the same disassembly, adjustment and reassembly procedure on the other side (except the detection system, which does not exist).
9. Disconnect the pressure.

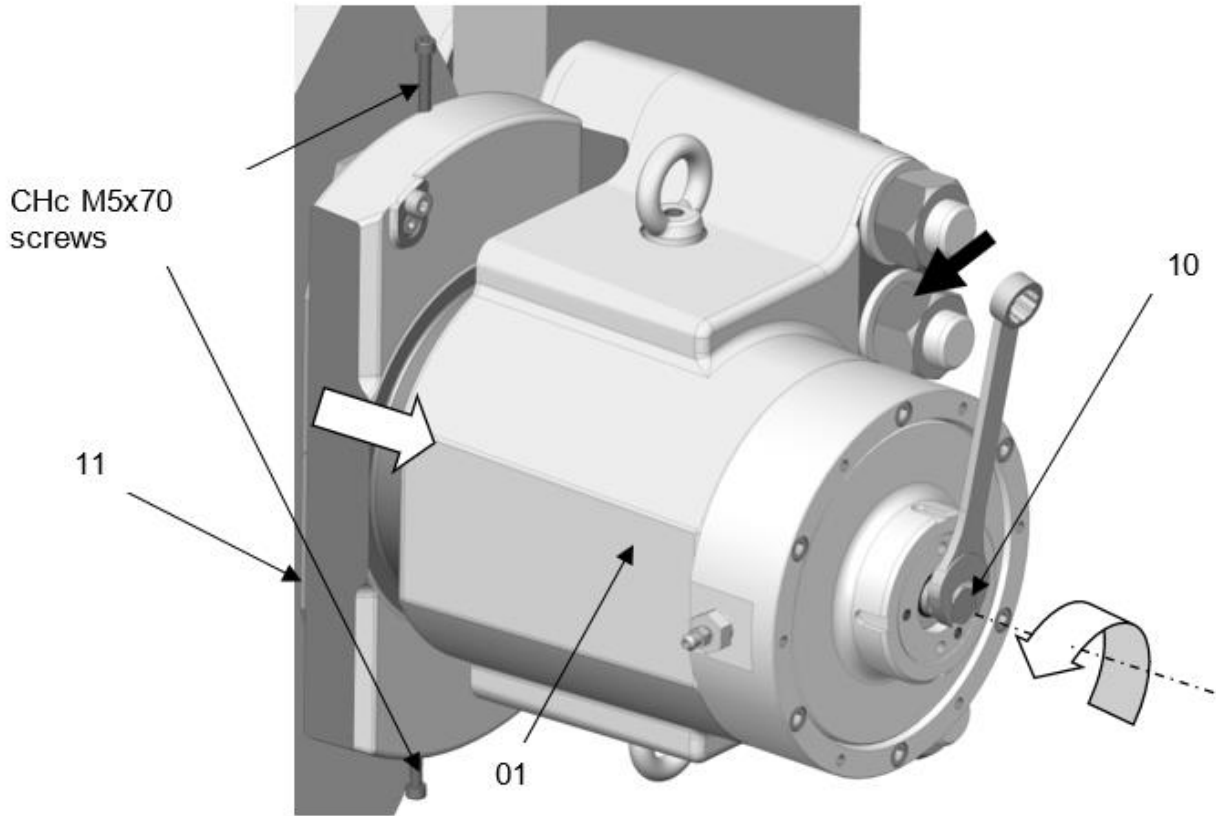


Fig. 5.5

| | | | | | |
|-------------------|---|-------------|---------------|------------------|----------|
| RINGSPANN | Installation and operating instructions for Brake HW 145 FHM spring activated – hydraulically released | | | E 09.776e | |
| Issue: 14.05.2021 | Version: 2 | Drawn: BAHS | Checked: EISF | Pages: 22 | Page: 19 |

5.4 Opening and wear contacts (mechanicals) adjustment



Information!

**Contacts are factory set and do not need any adjustment.
If necessary, follow this procedure.**

Verify the gap for the pad at each caliper, otherwise perform all the operations in chapter 5.2 or chapter 5.3. Refer to the identification plate for the nominal clearance.

Tools: A/F wrench, Allen wrench.

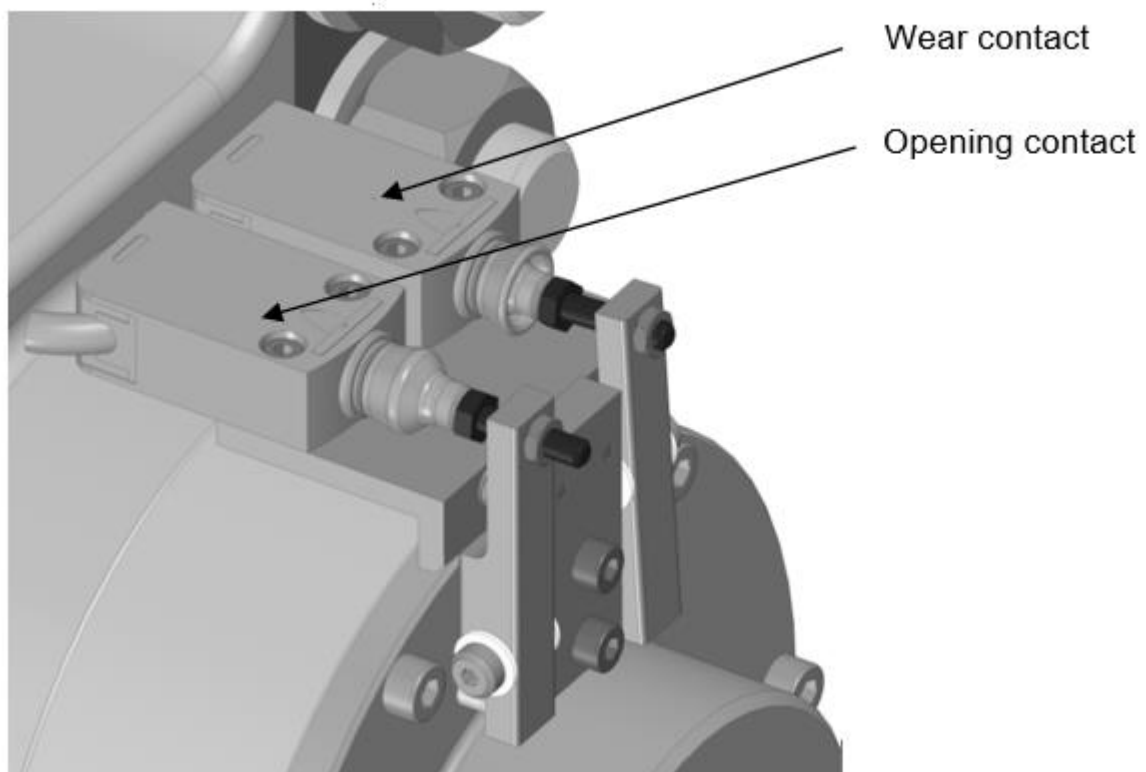


Fig. 5.6

5.4.1 Adjustment of 'brake released' switch

This switch monitors the status of the brake (closed or released)
It closes when the brake is released (set under pressure).

- Power the brake with opening pressure.
- Unscrew nut **V11**.
- Check that the axle **21** is in contact onto lever **22**.

| | | | | | |
|-------------------|---|-------------|---------------|------------------|----------|
| RINGSPANN | Installation and operating instructions for Brake HW 145 FHM spring activated – hydraulically released | | | E 09.776e | |
| Issue: 14.05.2021 | Version: 2 | Drawn: BAHS | Checked: EISF | Pages: 22 | Page: 20 |

- Adjust the screw **V02** until the activation of contact. Check that state contact is "Open".
- Cut off pressure. When the brake is close, Check the contact state (Position "closed"). If this information is not obtained, unscrew the screw **V02** until change of state.
- Power the brake with opening pressure.
- Check that state contact is "Open". Execute this operation till correct monitoring of the " open & closed" status.
- After an adjustment is finished, do not forget to retighten nut **V11** to the screw **V02**.

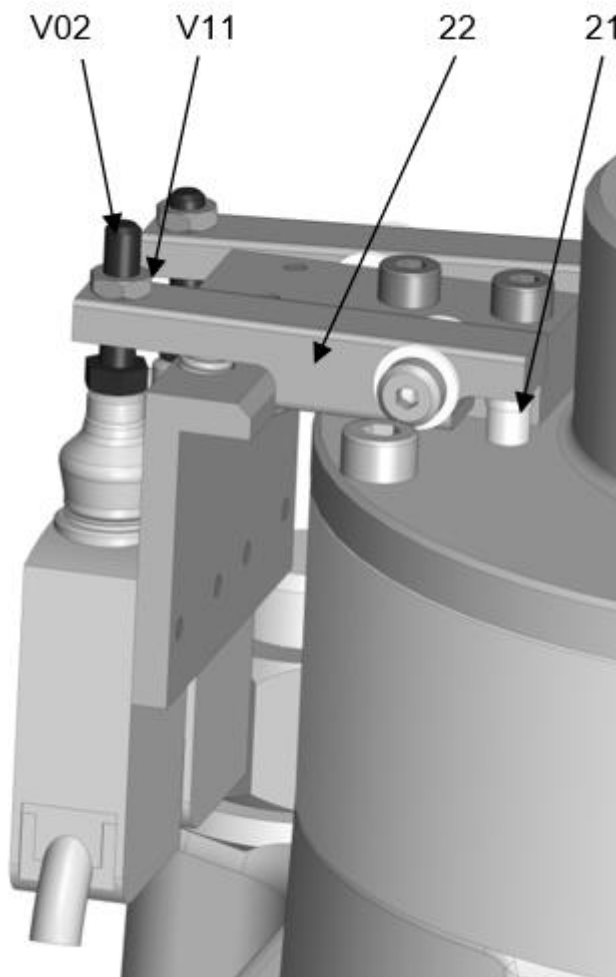


Fig. 5.7

| | | | | | |
|-------------------|---|-------------|---------------|------------------|----------|
| RINGSPANN | Installation and operating instructions for Brake HW 145 FHM spring activated – hydraulically released | | | E 09.776e | |
| Issue: 14.05.2021 | Version: 2 | Drawn: BAHS | Checked: EISF | Pages: 22 | Page: 21 |

5.4.2 Adjustment of 'pad wear' switch

This switch is permanently closed and opens when the pad wear reaches 1mm.

- Power the brake with opening pressure.
- Check that the pads clearance is correctly adjusted, otherwise proceed to adjustment.
- Brake being open, check that the connection pin **21** is in contact onto lever **23**.
- Cut off pressure to close the brake.
- Unscrew nut **V11** then adjust screw HC **V02** Allen wrench to free it from the switch end (adjust the screw skimming the lever).
- Adjust the screw HC **V02** until the switch triggers (status « worn pads »). When the pads will reach a 1 mm wear, the switch will release (as the hysteresis of the switch is 1mm).
- After an adjustment is finished, do not forget to retighten nut **V11** on the screw **V02**.

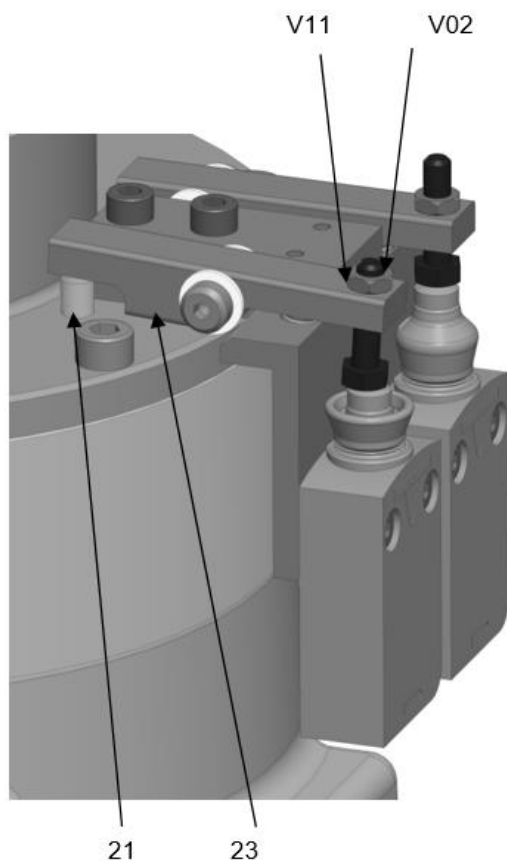


Fig. 5.8

| | | | | | |
|-------------------|---|-------------|---------------|------------------|----------|
| RINGSPANN | Installation and operating instructions for Brake HW 145 FHM spring activated – hydraulically released | | | E 09.776e | |
| Issue: 14.05.2021 | Version: 2 | Drawn: BAHS | Checked: EISF | Pages: 22 | Page: 22 |

6 Spare parts

Monitoring switches (Opening/wearing) Ref.: CONOUVREG-PIN-HW 145 FHM

- Set of pads:
 - ▶ 2 pads 12712-08 Ref: JGS-RINGSPANN-12712
- Hydraulic control parts comprising (Refer to assembly drawing):
 - ▶ 1 Piston 12712-004
 - ▶ 1 Piston rod 12712-003
 - ▶ 1 Rod seal JOITIG-070-080 Z
 - ▶ 1 Upper piston seal JOIPIS-160-144.5 E
 - ▶ 1 Static seal JOISTA-74.6-070 U
 - ▶ 1 Cylinder 12712-005
 - ▶ 1 Bleed screw 11271-17

In case of order, please specify:

Type, Nr. of the caliper and item Nr. of the part.

There is a type plate on the brake with a 16-digit article number. The exact design of the brake is defined by this article number only.

7 Troubleshooting

| NATURE | VERIFICATION | SOLUTION |
|---|--|---|
| Decrease in braking force | - Check the pad gap | - Proceed with pad gap adjustment chapter 5.2 |
| | - Check the condition of the pads and the disc (wear or grease particles). | - Replace the pads and clean the disc. |
| | - Check the pressure is zero | - No more pressure |
| Abnormal overheating of the disc during start-up. | - Insufficient gap between the pads and the disc in released position. - Check that pressure is at 230 bars | - Re-adjust the pads. Chapter 5.2 - Re-adjust pressure at 230 bars |
| The caliper releases and closes slowly | - Air may be in the circuit | - Bleed according to chapter 2.4 |